

GENERAL FEAT	ERAL FEATURES		
APPLICATIONS	Wall Washing Lighting		
LENS	Tempered Clear Glass Lens		
OPTICS AND ASYMMETRIC	10° - 60° or Asymmetric Optics		
LENGTH	Built to Order (2', 3', or 4' Increments)		
CONSTRUCTION	Aluminum Extrusion		
DRIVER	Integral		
WEIGHT	2.3 lbs (1'), 5.6 lbs (2'), 7.9 lbs (3'), 11.2 lbs (4')		
MOUNTING	Mounting Clips		
LISTING	Dry or Wet (IP65 or IP67) Location UL1598, CSA C22.2#250.0 UL8750, CSA250 UL2108, CSA C22.2 #9		
TEMPERATURE	Operating / Startup: -20° to 48°C (-4° to 120°F)		
RATINGS	Storage: -40° to 76°C (-40° to 170°F)		

ELECTRICAL				
DIMMING	0-10V, DMX, DALI			
MAXIMUM RUN (Line Voltage)	40' (3W, 5W, 6W, 8W) 35' (9W), 26' (12W), 21' (15W), 17' (18W)			
LUMINAIRE VOLTAGE	120V - 277V (UNV)			

PRODUCT INFORMATION

 
- Lighting for wall washing, cove, edge, undercabinet, accent, displays
- Line Voltage (Integral Driver) or Low Voltage (Remote Driver)
- Choose from a variety of LED colors and whites
- Available in 3 Watts up to 18 Watts Per Foot
- Product is shipped in 1', 2', 3', and 4' luminaires
- Available for outdoor rated installations



READ ENTIRE GUIDE BEFORE STARTING INSTALLATION

IMPORTANT NOTICE: VERIFY CORRECT LUMINAIRE WAS RECEIVED WITH CORRECT COLOR TEMPERATURE, VOLTAGE, AND WATTAGE BEFORE CUTTING OR INSTALLING. CALI WILL NOT BE RESPONSIBLE IF INCORRECT LUMINAIRE IS INSTALLED.

END VIEW



ELECTRICAL

- Line Voltage luminaires do not require a remote driver.
- Low Voltage luminaires require a remote driver.
- To calculate remote driver size, determine Watts per Foot.

Example: 3W per Foot

• Determine Length in Feet.

Example: 15'

- Calculate Load: Multiply Watts per Foot x Length in Feet
- **Example:** 3W x 15'= 45W. The load of the luminaire is 80 Watts.
- Choose a driver from catalog

Example: 60 Watt Driver (DRV60-E)

• Determine maximum distance using Maximum Wire Length Table on drivers page.

Example: 45 watts is between 40W and 60W. Using #14 wire, maximum distance is 37' from driver to first LED.

- Maximum load per line voltage fixture is 320 watts per circuit
- Maximum load per low voltage fixture (JA8) = 50 watts per circuit

INSTALLATION RECOMMENDATIONS

- AlumLEDs can be mounted to sheetrock, concrete, or wood using proper mounting screws.
- All wiring is enclosed inside aluminum housing .
- Provide run lengths at time of order.
- AlumLEDs is suitable for indoor (Dry) or outdoor (IP65 or IP67) applications.

INSTALLATION TOOL REQUIRED

- Electric Hammer Drills (optional)
- 14.4 to 28 Volt Cordless Drills
- Phillips Bits Sufficient Quantity
- Utility Knife
- Electrical Cords
- Marker
- Wire Strippers

- Long Nose Pliers
- Drill Bits Concrete or Wood
- Electrical Three Ways
- Safety Glasses
- Measuring Tapes
- Chalk Line



2820 E. Gretta Lane, Anaheim, CA 92806







ALS600T NSTALLATION INSTRUCTIONS Product Care & Maintenance

WARNING

When using alumLEDs for any application, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injuries.

AlumLEDs must be installed in accordance with the NEC or CEC as applicable.

CALI will not be responsible for any damage or malfunction caused by the following:

- Ensure power is off before installation begins, during replacements, additions, or repairs.
- Do not use alumLEDs if damaged, such as broken boards, loose connections, or frayed wire insulation. Inspect before installing.
- Do not install alumLEDs in hazardous locations.
- Do not cover alumLEDs with any material. Covering may cause LEDs to overheat, melt, or ignite.
- Do not paint on or over fixture lens or LEDs.

Paint or any other substance on lens or LEDs will cause a shift in color temperature.


- Soffit must be evenly painted with a neutral white to avoid color shift.
- Do not modify alumLEDs in the field.
- Do not overlap alumLEDs luminaires in any way. (Fig. 1)
- alumLEDs have line voltage risk of shock. Consult factory for any malfunctions.
 Do not attempt to repair.
- Only use alumLEDs with specified rated voltages. Do not exceed the specified voltage for any alumLEDs luminaire.
- Do not use alumLEDs extrusion as a raceway for additional wire. Non-factory feed through wires inside alumLEDs will void warranty.
- Ground Fault Circuit Interrupter (GFCI) protections should be provided on circuits or outlets when alumLEDs is used for outdoor applications.
- Surge protector must be set up for electrical power system to avoid damaging alumLEDs lighting system.
- Do not connect wires together, follow provided wiring diagrams.
- Do not cut wire while energized. (Fig. 2)
- Do not exceed maximum run lengths.
- Do not secure alumLEDs with nails or like means that might damage the wiring inside.
 Only secure by using mounting clips.
- Do not mount alumLEDs inside tanks or enclosures of any kind.
- Do not install downward facing luminaires without set screws.
- Do not use improper screw head type on mounting clips. It will cause the mounting clip to open up and become dysfunctional.
- \bullet Do not modify mounting clips.
- Do not mount fixture with less than the minimum number of mounting clips required.
 See mounting clips section for details.
- Do not force alumLEDs into a space that is too small.
- Do not force alumLEDs with cord grip into soffit. (Fig. 3)
- Do not install alumLEDs at an angle within a cove. Only install fixtures straight within a cove. (Fig. 4)
- Do not bend extrusion around radius.
- Do not submerge dry or wet location alumLEDs in any liquid.
- Do not install wet location in outdoor coves without proper drainage. (Fig. 5)
- Do not install alumLEDs in any area that is continuously exposed to flowing or pooling water, such as underneath drain pipes, sprinklers, fountains, misters, etc.
- Do not cut, puncture, or penetrate alumLEDs aluminum housing, end caps, or lens covers.
- Do not drop, bang, or rest weight upon alumLEDs.
- Do not apply excessive pressure to any part of alumLEDs.
- Do not remove end caps from alumLEDs.
- Do not bend alumLEDs power cord or continuous connector past permitted bend radius. Bending past permitted bend radius will break the seal of the cordgrip or damage the insulation. (Fig. 6)

Wet Location: 3.5" minimum bend radius

Dry Location: 1.5" minimum bend radius

- Do not install alumLEDs in places where the power cord is subject to continuous flexing.
- \bullet Do not twist continuous connector or power cord.
- \bullet Do not hold, carry, or suspend alumLEDs by the power cord.
- Do not install alumLEDs on ceilings without mounting clips and set screws. (Fig. 7)

FIGURES

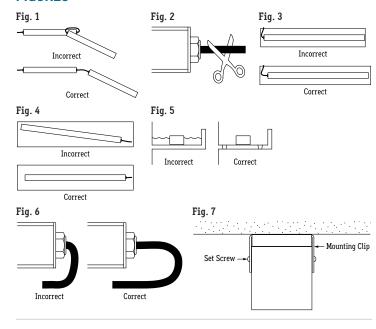

CLEANING MATERIALS

The use of solvents and/or cleaners which are not compatible with polycarbonate will result in the softening, crazing, and/or cracking of the plastic part. This is especially true of polycarbonate lamps and mounting bases which may be under stress in their normal applications.

COMPATIBLE WITH POLYCARBONATE

- \bullet Mild soap and water
- Mineral Spirits
- Isobutyl alcohol
- VM and P Naphtha
- Varsol No.2
- Mexane
- Freone TF and TE-35
- Ethanol
- Dirtex

- 2% Sol. Reg. Joy
- 10% Sol Bon Ami • White Kerosene
- Methyl alcohol
- Heptane
- Petroleum Ether/65 degrees C
- Isopropyl alcohol
- Lacryl PCL-2035 polycarbonate cleaner

NOT COMPATIBLE WITH POLYCARBONATE

- Trichlor
- Gasoline
- Liquid Detergents
- Acetone
- Carbon Tetrachloride
- Pink Lux (Phosphate free)
- Triclene
- Chlorinated Hydrocarbons
- •#1 & #3 denatured alcohol
- Methyl Ethyl Keytone (MEK)
- Texize-8006, 8129, 8758
- MIBK

- Liquid Cleaner 8211
- ToluolAgitene
- Agite
- $\bullet \ \mathsf{Benzol}$
- Ajax
- Kleenol Plastics
- LysolStanisol Naphtha
- Oils
- Lemon Joy (phosphate free)
- DiversolLestoil





0-10V DIMMING (10V)

Technical Requirements For Control Equipment

- The light output of the LEDs operated by the controllable LED driver is controlled by DC voltage applied to the control input leads (gray and violet). The actual response curve of LED driver current versus control voltage.
- The control device must be capable of accepting or sinking the DC current flow from the driver. The DC current from the driver that must be sinked by the control circuit is approximately 150uA (+/50% for isolated dim interfaces, up to 1.5mA for non isolated dim interfaces).
- If the control bus is opened, or if the control device internally opens the control bus under some conditions, the voltage on the control bus will then be a function of the drivers, which is 10-15V. Maximum light output will be delivered under this condition.
- If the control bus is shorted either by a mechanical switch in the control or by the circuitry of the control device, or inadvertently in the wiring, the current on the control bus will be less than 1.5mA.
- As can be determined from the two items, simple two-level operation of the drivers can be achieved by proper usage and application of a simple open/closed switch on the control bus with maximum light being achieved when the switch is open and minimum light with the switch is closed.
- The driver is intended to be used with control voltages between 0-10VDC volts peak maximum on the driver control leads.
- Control equipment intended to control more than one driver must be capable of sinking the current supplied tot the control bus by the maximum number of drivers specified for the control device. At any given level setting it must maintain control bus voltage constant within a range of ±5% as the number of drivers connected to the control bus varies from a minimum of one driver up to the maximum number specified for the control device.
- Driver of various ratings may be mixed on the same control system.

0-10V DIMMING (10V-.1%)

Technical Requirements For Control Equipment


- The light output of the LEDs operated by the controllable LED driver is controlled by DC voltage applied to the control input leads (grey and violet). The actual response curve of LED driver current versus control voltage.
- The control device must be capable of accepting or sinking the DC current flow from the driver. The DC current from the driver that must be sinked by the control circuit is approximately 150uA (+/50% for isolated dim interfaces, up to 1.5mA for non isolated dim interfaces).
- If the control bus is shorted either by a mechanical switch in the control or by the circuitry of the control device, or inadvertently in the wiring, the current on the control bus will be less than 1.5mA.
- As can be determined from the two items, simple two-level operation of the drivers
 can be achieved by proper usage and application of a simple open/closed switch on
 the control bus with maximum light being achieved when the switch is open and
 minimum light with the switch is closed.
- The driver is intended to be used with control voltages between 0-10VDC volts peak maximum on the driver control leads.

ALS**600T**


Dimming Protocol & Wiring Diagrams (0-10V)

0-10V DIMMER RATINGS

The stated VA (volt-ampere) rating is the rated capacity of the dimmer which includes the electronic transformer heat losses and the lamp load. A transformer dissipates less than 20% of the connected load as heat. The lamp load plus the transformer loss determine the dimmer capacity required. See the example below.

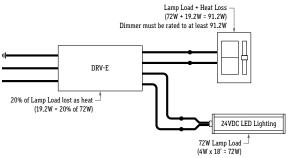


0-10V WIRING DIAGRAM (Remote Driver)

 


Notes: Wire colors vary based on model. See individual submittal for more information, or refer to wiring diagram on driver label. Confirm wire colors before connecting to power source. Cap off dimming wires individually for non-dimming applications.

For best dimming performance, use a minimum load of 50% and a maximum load of 80%.

 0-10V WIRING DIAGRAM (Dry Location Only)



 
0-10V WIRING DIAGRAM (Dry or Wet Location)








 DMX WIRING DIAGRAM (Dry or Wet Location)



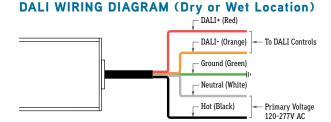

When connecting DMX Shield to a DMX controller terminal, ensure that it is not connected to or touching earth ground, chassis ground, and / or DC power (-) return.

NOTE

- Default DMX address of each luminaire is 001. Consult third party DMX commissioner to modify at time of installation.
- Connection from DMX controller to luminaire must be made using a proper daisy chain connection per DMX-512 / RDM standards.
- Do not make DMX wiring connections in parallel.

NOTE

DALI commissioning to be performed by a third party at time of installation.
 CALI does not provide DALI commissioning.






ALS600T INSTALLATION INSTRUCTIONS Configurations (1 of 2)


LUMINAIRE SEGMENT (Dry Location)




POWER CONNECTOR (Dry Location)

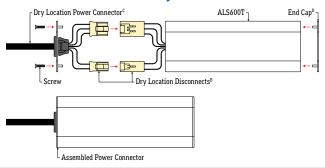

CONTINUOUS RUN (Dry Location)

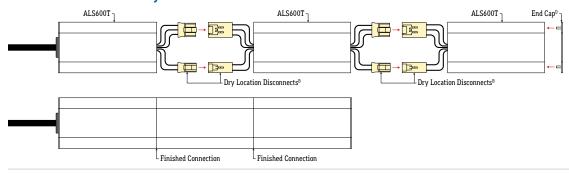

CONTINUOUS RUN (Wet Location)

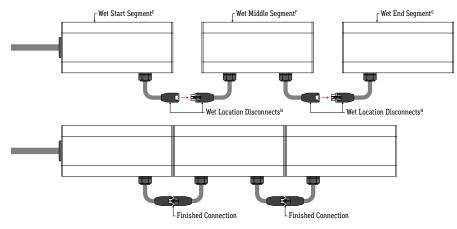


KEY	
A	Dry Luminaire Segment: Each Dry Location segment has dry rated disconnects at each end to easily plug and play various accessories or the next segment of a run.
В	Dry Location Disconnects: Used to connect a segment to the next segment in line, or an accessory such as Power Connector or Jumper Cable.
С	Dry Location Power Connector: Used to connect a run to power source.
D	End Cap: Used to terminate a run. Specify 1 End Cap for each Dry Location run. Specification of End Caps for Wet Location runs is not required.

E	Wet Start Segment: The first segment a Wet Location run. One end has assembled power lead, and the other end has Wet Location Disconnects.			
F	Wet Middle Segment: The middle segment of a Wet Location run. Each end has Wet Location Disconnects.			
G	Wet End Segment: The last segment of a Wet Location run. One end has Wet Location Disconnects, and the other end has and End Cap.			






RUN WITH JUMPER CABLE (Dry Location)

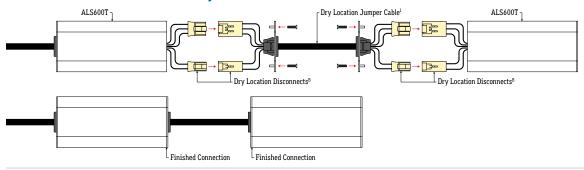

RUN WITH JUMPER CABLE (Wet Location)

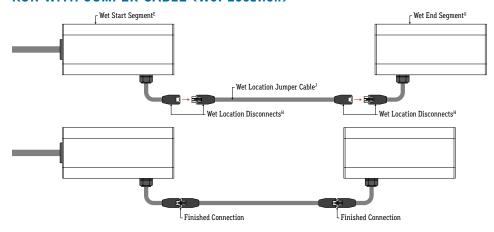

KEY	
В	Dry Location Disconnects: Used to connect a segment to the next segment in line, or an accessory such as Power Connector or Jumper Cable.
E	Wet Start Segment: The first segment a Wet Location run. One end has assembled power lead, and the other end has Wet Location Disconnects.
G	Wet End Segment: The last segment of a Wet Location run. One end has Wet Location Disconnects, and the other end has and End Cap.
Н	Wet Location Disconnects: Used to connect a segment to the next segment in line, or an accessory such as a Jumper Cable.
I	Dry Location Jumper Cable: Used when a gap is needed between two Dry Location segments on the same circuit.
J	Wet Location Jumper Cable: Used when a gap is needed between two Wet Location segments on the same circuit.



 
CALIFORNIA ACCENT LIGHTING INC

Standard Mounting Clips (ALS600T-MC, ALS600T-MC-3)


WET LOCATION

- Measure area where luminaire will be installed. Use a laser line to create a reference along installation area, ensuring accurate placement of mounting clips. Mark location where each mounting clip will be installed along reference line.
- 2 Use 2 mounting clips per luminaire segment.

Example: 4' + 4' + 2' = 2 MC + 2 MC + 2 MC = 6 MC total.




4b Screw MC-3 mounting clips to surface, then snap luminaire into mounting clips. Install set screws if required. Set screws are required for downward and outward facing applications.

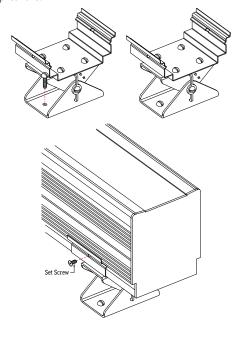

DRY LOCATION

- Measure area where luminaire will be installed. Use a laser line to create a reference along installation area, ensuring accurate placement of mounting clips. Mark location where each mounting clip will be installed along reference line.
- 2 Use 1 mounting clip every 2' + 1.

 Example: 4' + 4' + 2' = 2 MC + 2 MC + 1 MC + 1 MC = 6 MC total. Use a mounting clip at the junction between two luminaire segments.




3 Lay mounting clips along reference line and pre-drill surface using an appropriate drill bit for surface and screw size.


Recommendation: 8/32 x 1" Screw.


Note: Allow 1/4" clearance for lateral expansion of assembled mounting clips. Only install mounting clips on flat, even surfaces.


4a Screw MC-1 mounting clips to surface, then snap luminaire into mounting clips. Install set screws if required. Set screws are required for downward and outward facing applications.

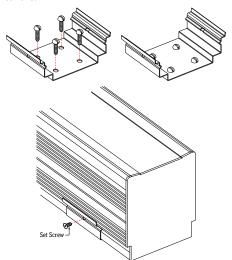


ASSEMBLED END VIEWS

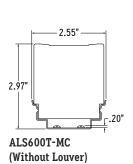

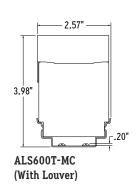

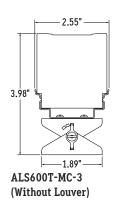

 

CALIFORNIA ACCENT LIGHTING, INC.

2820 E. Gretta Lane, Anaheim, CA 92806

ph. 800.921.CALI (2254) | fx. 714.535.7902 | info@calilighting.com | calilighting.com © CALI. All rights reserved. CALI reserves the right to make changes or withdraw specifications without prior notice.







ALS600T
INSTALLATION INSTRUCTIONS
Stake Mounting Clip (ALS600T-MC-STK)

- Measure area where luminaire will be installed. Use a laser line to create a reference along installation area, ensuring accurate placement of mounting clips. Mark location where each mounting clip will be installed along reference line.
- 2 Use 2 mounting stakes per luminaire segment.

 
Example: 4' + 4' + 2' = 2 MC + 2 MC + 2 MC = 6 MC total.



3 Insert stakes into the ground until entire tapered portion is submerged. The ground must be dense enough to support the weight of the luminaires. Do not install stakes into soft or loose ground.

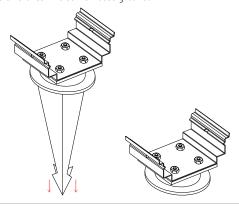

- 4 Ensure each stake is secure in place, then snap luminaires into mounting clips.
- 5 If applicable, connect disconnects between luminaire segments. Slide shrink tube over connectors and apply heat. The shrink tube will shrink down, sealing the connectors. Apply silicone around sealed connectors for a stronger seal.
 Note: Only use a heat gun to apply heat to shrink tubes. Do not use an open flame such as a lighter or gas torch.

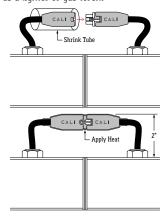






- Measure area where luminaire will be installed. Use a laser line to create a reference along installation area, ensuring accurate placement of mounting clips. Mark location where each mounting clip will be installed along reference line.
- 2 The number of required mounting clips differs for dry and wet location products. Verify number of mounting clips is appropriate for installation environment before beginning installation. Do not install luminaires with inadequate number of mounting clips. Refer to the Mounting Clips page for additional information.
- 3 Lay mounting clips along reference line and pre-drill surface using an appropriate drill bit for surface and screw size.


Recommendation: 8/32 x 1" Screw.

Note: Allow 1/4" clearance for lateral expansion of assembled mounting clips. Only install mounting clips on flat, even surfaces.

4 If applicable, connect disconnects between segments and push together, leaving no gap. Use a mounting clip at the junction between two segments.

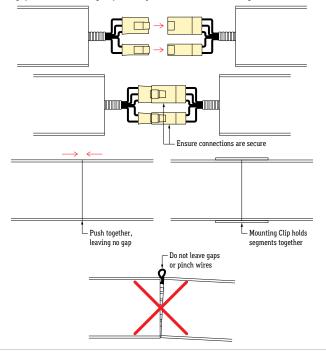


5 If applicable, connect jumper cable disconnects between segments. Install end cap screws to connect end cap to segment.

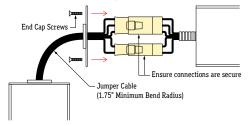


ALS600T INSTALLATION INSTRUCTIONS Mounting Luminaire (Dry Location)

6 Screw MC-1 mounting clips to surface, then snap luminaire into mounting clips. Install set screws if required. Set screws are required for downward and outward facing applications.

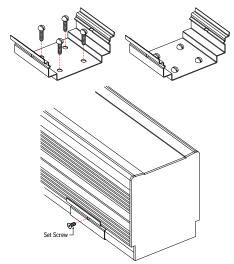

7 If applicable, connect power cord disconnects to luminaire segment. Install end cap screws to connect end cap to segment.

Note: Standard luminaire provided with 1 factory installed 6' power cord and 1 end cap at the end of each run. Power cord is easily relocated by unscrewing end cap and undoing disconnects.

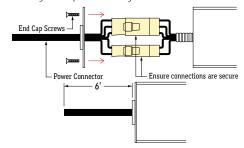

- 8 Perform a continuity test before connecting luminaire to power source.

 Refer to Troubleshooting & Continuity Test page for additional information.
- 9 Verify wiring diagram, then connect luminaire to power source.






- Measure area where luminaire will be installed. Use a laser line to create a reference along installation area, ensuring accurate placement of mounting clips. Mark location where each mounting clip will be installed along reference line.
- 2 The number of required mounting clips differs for dry and wet location products. Verify number of mounting clips is appropriate for installation environment before beginning installation. Do not install luminaires with inadequate number of mounting clips. Refer to the Mounting Clips page for additional information.
- 3 Lay mounting clips along reference line and pre-drill surface using an appropriate drill bit for surface and screw size.

Recommendation: 8/32 x 1" Screw.


Note: Allow 1/4" clearance for lateral expansion of assembled mounting clips. Only install mounting clips on flat, even surfaces.

4 If applicable, connect disconnects between luminaire segments. Slide shrink tube over connectors and apply heat. The shrink tube will shrink down, sealing the connectors. Apply silicone around sealed connectors for a stronger seal.
Note: Only use a heat gun to apply heat to shrink tubes. Do not use an open flame such as a lighter or gas torch.

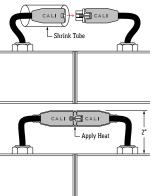




5 Screw MC-1 mounting clips to surface, then snap luminaire into mounting clips. Install set screws if required. Set screws are required for downward and outward facing applications.

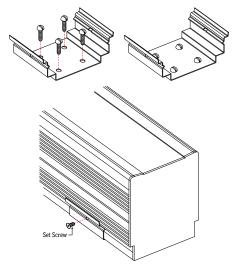


- 6 Perform a continuity test before connecting luminaire to power source. Refer to Troubleshooting & Continuity Test page for additional information.
- 7 Verify wiring diagram, then connect luminaire to power source.



 
- Measure area where luminaire will be installed. Use a laser line to create a reference along installation area, ensuring accurate placement of mounting arms. Mark location where each mounting arm will be installed along reference line.
- **2** Determine number of mounting arms needed. Use a minimum of 2 mounting arms per luminaire segment. Mount arms 6" from center of mounting plate to edge of luminaire. Refer to the spacing diagrams on this page for details.
- 3 Mark location where each mounting arm will be installed. Screw arm base to surface using countersink screws appropriate for surface material.



4 Screw luminaire to mounting plates through the bottom using countersink holes. Ensure each segment is secured in place and spacing is accurate according to the spacing diagrams.

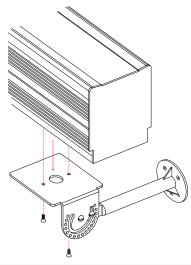

5 Loosen set screw until the mounting bracket can move freely. Turn the mounting bracket until desired angle is achieved, then mate the locking bump with locking hole. Tighten set screw until mounting bracket is secured in place.

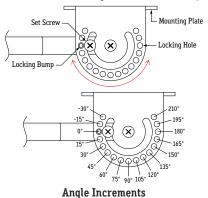



ALS600T

INSTALLATION INSTRUCTIONS

Bottom Mount Adjustable Arm (ALS600T-AA-BM-X)

6 If applicable, connect disconnects between luminaire segments. Slide shrink tube over connectors and apply heat. The shrink tube will shrink down, sealing the connectors. Apply silicone around sealed connectors for a stronger seal.
Note: Only use a heat gun to apply heat to shrink tubes. Do not use an open flame such as a lighter or gas torch.

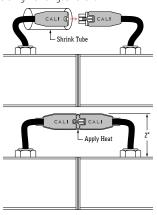


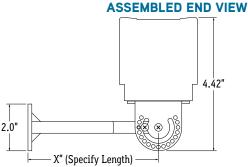


Note: Add 0.93" to overall height for luminaires with louver or reflector installed

SPACING DIAGRAMS

 
Example: 4' Luminaire



Example: 8' (4' + 4') Luminaire

 

Example: 9' Luminaire (4' + 3' + 2')

 




2820 E. Gretta Lane, Anaheim, CA 92806






 
- Measure area where luminaire will be installed. Use a laser line to create a reference along installation area, ensuring accurate placement of mounting arms. Mark location where each mounting arm will be installed along reference line.
- 2 Determine number of mounting arms needed. Use a minimum of 2 mounting arms per luminaire segment. Mount arms 6" from center of mounting plate to edge of luminaire. Refer to the spacing diagrams on this page for details.
- **3** Mark location where each mounting arm will be installed. Screw arm base to surface using countersink screws appropriate for surface material.



4 Screw luminaire to mounting plates through the bottom using countersink holes. Ensure each segment is secured in place and spacing is accurate according to the spacing diagrams.

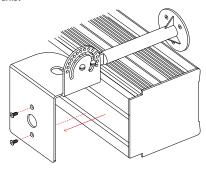

5 Loosen set screw until the mounting bracket can move freely. Turn the mounting bracket until desired angle is achieved, then mate the locking bump with locking hole. Tighten set screw until mounting bracket is secured in place.

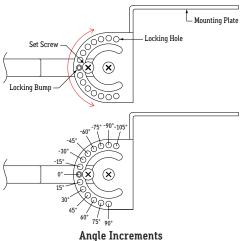


ALS600T


INSTALLATION INSTRUCTIONS

Side Mount Adjustable Arm (ALS600T-AA-SM-X)

6 If applicable, connect disconnects between luminaire segments. Slide shrink tube over connectors and apply heat. The shrink tube will shrink down, sealing the connectors. Apply silicone around sealed connectors for a stronger seal.
Note: Only use a heat gun to apply heat to shrink tubes. Do not use an open flame such as a lighter or gas torch.

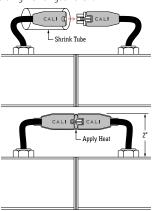


ASSEMBLED END VIEW

 


Note: Add 0.93" to overall height for luminaires with louver or reflector installed

 SPACING DIAGRAMS






Example: 8' (4' + 4') Luminaire

 

Example: 9' Luminaire (4' + 3' + 2')

 







- Determine number of louvers needed for your installation. The louver is available in 1', 2', 3', or 4' lengths.
- 2 Place louver centered on top of luminaire. Match the louver length to the luminaire segment length.

Example: Use a 1' louver for a 1' segment, 2' louver for a 2' segment, and so on.

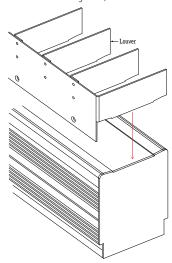


3 Install set screws to secure each louver to luminaire. Each louver must be secured using all available set screws. Do not over tighten set screws.

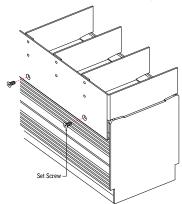


ALS600T INSTALLATION INSTRUCTIONS Louver (ALS600T-LVR)

4 If applicable, connect disconnects between luminaire segments. Slide shrink tube over connectors and apply heat. The shrink tube will shrink down, sealing the connectors. Apply silicone around sealed connectors for a stronger seal.
Note: Only use a heat gun to apply heat to shrink tubes. Do not use an open flame such as a lighter or gas torch.

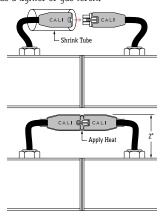

5 Luminaires with louver must be mounted a minimum of 12" away from wall.

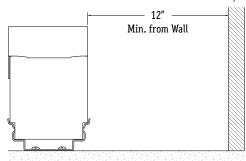







- 1 Determine number of reflectors needed for your installation. The reflector is available in 1', 2', 3', or 4' lengths.
- 2 Place reflectors on luminaire. Match the reflector length to the luminaire

Example: Use a 1' reflector for a 1' segment, 2' for a 2' segment, and so on.

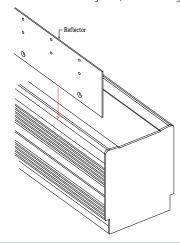


3 Install set screws to secure each louver to luminaire. Each louver must be secured using all available set screws. Do not over tighten set screws.

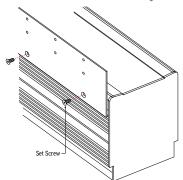


Reflector (ALS600T-RE1)

4 If applicable, connect disconnects between luminaire segments. Slide shrink tube over connectors and apply heat. The shrink tube will shrink down, sealing the connectors. Apply silicone around sealed connectors for a stronger seal. Note: Only use a heat gun to apply heat to shrink tubes. Do not use an open flame such as a lighter or gas torch.

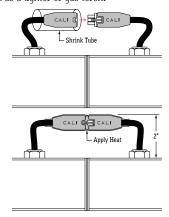

5 Luminaires with louver must be mounted a minimum of 12" away from wall.

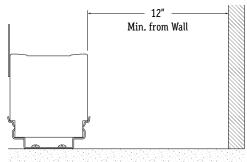


alumLE




TROUBLESHOOTING TIPS

 
- Do not reset the breaker multiple times.
- If the unit is overloaded, the breaker will trip, shutting off the driver and lights.
- If the breaker reset button has been held down by hand or any type of pressure, such as duct tape, or if the breaker has been reset multiple times without troubleshooting, the unit will:
- Burn the driver bobbin.
- Burn the thermal or magnetic breaker.
- Burn the driver lead wires due to high amperage caused by overload.
- Short circuit in line which will not allow the breaker to reset.
- Damage the lighting.
- 1 Turn off power before beginning. Check for any twisting or damage to the circuit in the LED lightstrip. If there is excessive damage and the circuit is broken, the lightstrip must be replaced.



 2 Check for metal particles or other foreign objects causing the short.



 3 Check to make sure cuts in the lightstrip are clean and not frayed, causing positive and negative copper pads to touch.



CONTINUITY TEST


A continuity test is performed to determine if electricity can pass through two points on an electrical circuit. This helps identify shorts or malfunctions in the line or luminaire. Use a multimeter or continuity tester to perform the steps below.

- Always perform a continuity test before connecting to power source.
- Malfunctions are not always as obvious as the lights not turning on.
- A short or malfunction in the line or luminaire will cause damage over time, irreparably damaging the lighting and voiding warranty.
- 1 Turn off power before beginning. Verify power is off by using a non-contact circuit tester (by others). Touch the probe of the tester to the positive wire of the power source. The tester will light up if an electrical current is detected.
- **2** Setup your multimeter tester (by others). First, insert the black probe lead into the COM jack, then insert the red probe lead into the $V\Omega$ jack.




ALS600T INSTALLATION INSTRUCTIONS Troubleshooting & Continuity Test

- 3 Verify multimeter is functional by touching probes together. The multimeter should beep, flash, or read 00 (ohms) of resistance.
- 4 Touch the red probe to the luminaire extrusion and the black probe to the ground wire (green). If the luminaire is properly grounded, the multimeter will beep, flash, or read 00 (ohms). If there is no conductive path, the multimeter will not show any feedback. Troubleshoot to identify the malfunction in the ground wire.

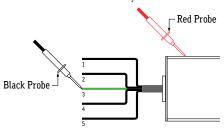


Touch the red probe to any wire and the black probe to each other wire. Repeat process for each wire. If a conductive path is formed between any of the wires, the multimeter will beep, flash, or read 0Ω (ohms). Troubleshoot to identify the malfunction in the line. If there is no conductive path, the multimeter will not show any feedback.

 Example: Check for continuity between Wire 2 and Wire 4



6 Touch the red probe to the luminaire housing and the black probe to each wire except ground. If a conductive path is formed between the housing and any of the wires, the multimeter will beep, flash, or read $\Omega\Omega$ (ohms). Troubleshoot to identify the malfunction in the line. If there is no conductive path, the multimeter will not show any feedback.

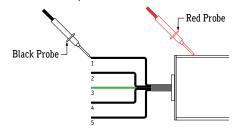

- 7 Set multimeter to AC voltage and test power source. Confirm the correct voltage before connecting luminaire to power source. If the voltage reading is more than 1 volt greater than the marked output voltage, there is a problem with the power source or driver.
- 8 Connect luminaire to power source. If LEDs do not turn on, troubleshoot to find the problem in the line.




2820 E. Gretta Lane, Anaheim, CA 92806









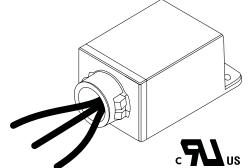

CASE DIMENSIONS

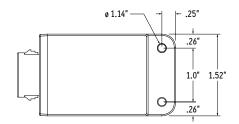

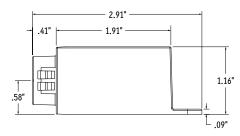

SURGE PROTECTOR SPECIFICATIONS

MODEL	INPUT VOLTAGE	SURGE PROTECTION LEVEL	MOUNTING	ENCLOSURE MATERIAL	INPUT LEADS	INPUT FREQUENCY
ALS-SP	120V - 277V	10kV, 10kA, ANSI C62.41 Category C	SnapLOCK / Footed	Polycarbonate	6", 18AWG stranded, 105°C stripped, 3/8" tinned	60Hz

 
PRODUCT FEATURES

The Surge Series are 3-leaded devices that protect Line-Ground, Line-Neutral, and Neutral-Ground in accordance with IEEE / ANSI C62.41.2 guidelines. Protects against surges according to IE EE C62.41.2 C High (10kA and 10kV). Surge current rating = 10,000 Amps using industry standard 8/20 μ Sec wave. Surge Location Rated Category C3. UL Recognized Component in the United States and Canada (UL1449). Type 4 Surge Protection Device. High temperature, flame retardant plastic enclosure, 85°C maximum surface temperature rating. Thermally Protected Transient Over-voltage Circuit.

PRODUCT SPECIFICATIONS

The Surge series of products are designed to be used in conjunction with LED Drivers and fixtures to provide an additional level of protection against powerline disturbances in industrial, commercial and residential applications where surge protection to IEEE C62.41.2 is required.

0-10V WIRING DIAGRAM (10V Dimming)



Note: Wire colors vary based on model. See individual TRA-E submittal for more information, or refer to wire callouts on transformer labeling. Always confirm wire colors before connecting to power source.

